

# **SEG AUTOMOTIVE GUI – Installation Manual**

## ***SEG Automotive GmbH***

# Content

---

|                                    |   |
|------------------------------------|---|
| Installation Manual.....           | 3 |
| Step 1: License Agreement.....     | 3 |
| Step 2: Destination Location ..... | 4 |
| Step 3: Start Menu Folder .....    | 4 |
| Step 4: Additional Tasks .....     | 5 |
| Step 5: Installation Summary ..... | 5 |

# Installation Manual

---

Please follow the steps carefully to ensure a successful installation.


## System Requirements

- Disk space: **Minimum 86.5 MB.**
- Operating system: **Windows 10/11 (64-bit).**
- Administrator privileges for installation.

## Step 1: License Agreement

---


1. Run the installation file (SEG\_AUTOMOTIVE\_GUI\_Setup.exe).
2. Read the license agreement carefully.
3. Check the box **"I accept the terms of the agreement"** and click **Next**.

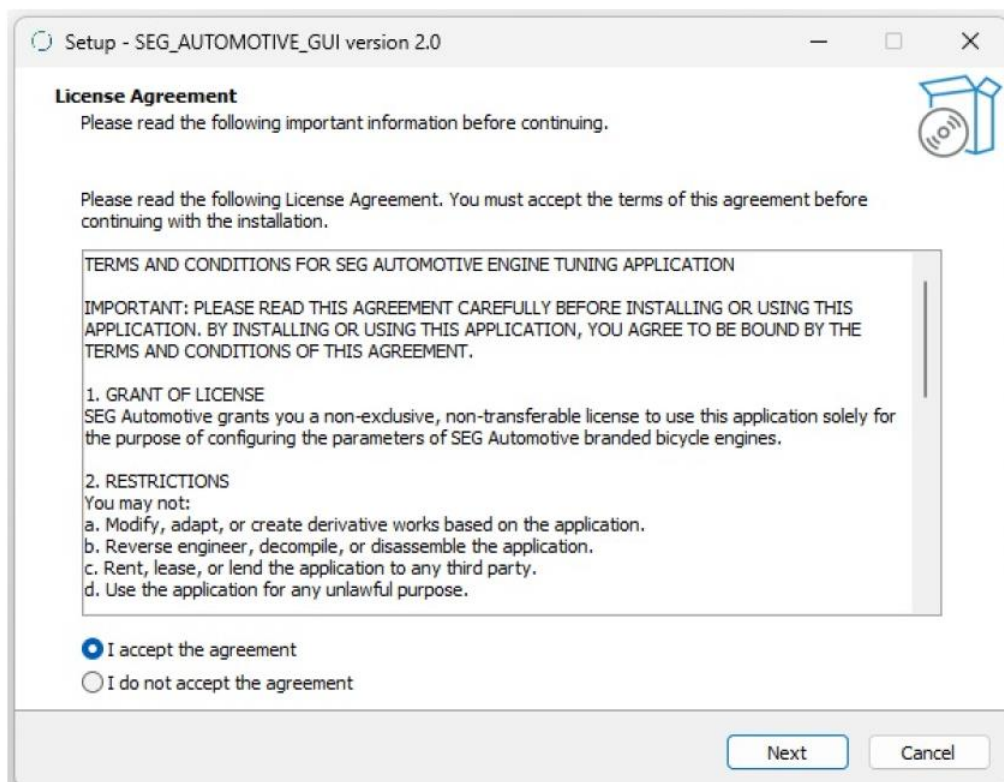

## Step 2: Destination Location

---


1. Select the installation folder (default: C:\Program Files\SEG\_AUTOMOTIVE\_GUI).
2. To change the location, click **Browse...** and select the desired folder.
3. Click **Next** to continue.

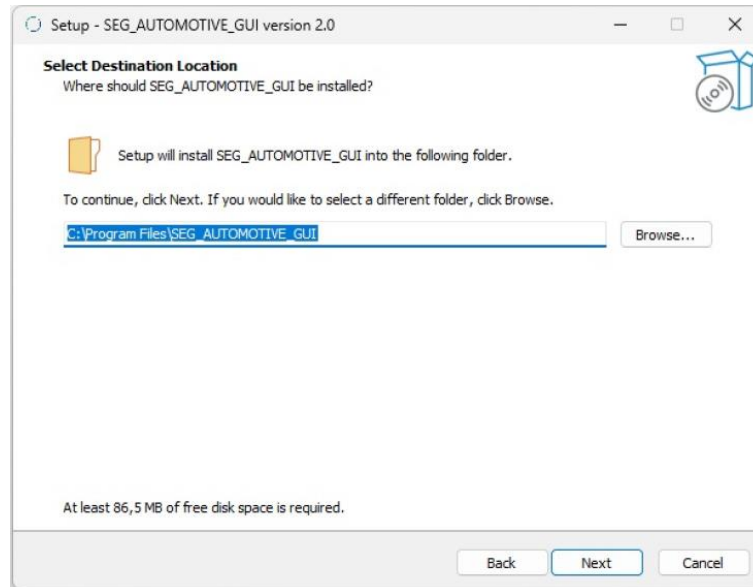

## Step 3: Start Menu Folder

---


1. Select the **Start Menu** folder where shortcuts will be created (default: SEG\_GUI).
2. Click **Next**.

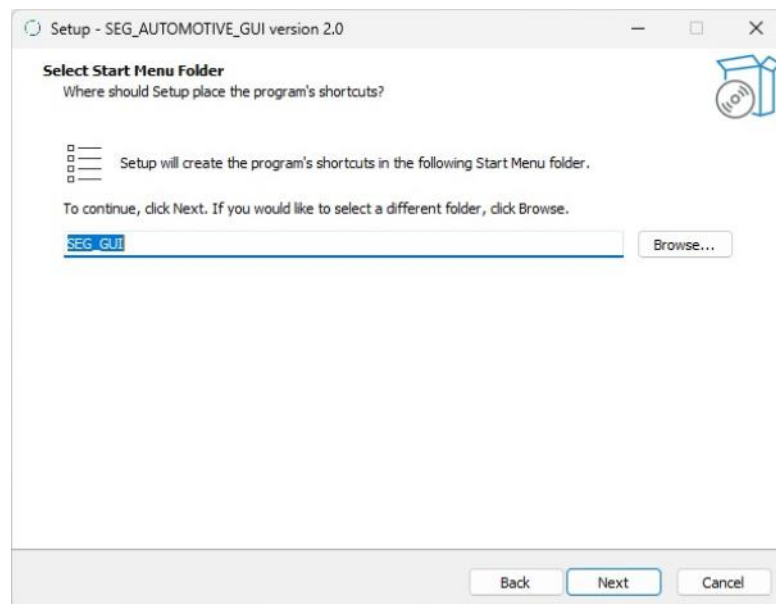

## Step 4: Additional Tasks

---

1. Check **"Create a desktop shortcut"** if you want a shortcut on your desktop.
2. Click **Next**.

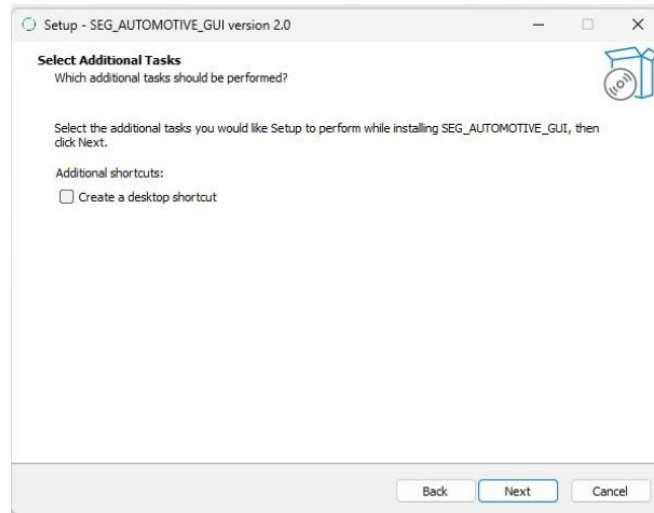

## Step 5: Installation Summary

---

Review the selected settings:

- **Installation location** : C:\Program Files\SEG\_AUTOMOTIVE\_GUI
- **Start Menu folder**: SEG\_GUI
- **Desktop shortcut**: Enabled/Disabled

Click **Install** to begin the installation.

